

Dear All,

Here is a short manual how to switch on and off the intercomlayer software. Sill some development are going, so please contact me anyway when you want to use it.

First of all, you have to log in the DCS gateway machine (alphspcdcs01.cern.ch). Please ask the username/password privately to Per Thomas (or me). Then, please type one command;

```
> InterComLayerPHOS.sh
```

It will give you a simple usage of this command. All you have to do in order to start, stop, restart, or have a look at the status of the inter-com-layer process, please type;

```
> InterComLayerPHOS.sh start
> InterComLayerPHOS.sh stop
> InterComLayerPHOS.sh restart
> InterComLayerPHOS.sh status
```

When you are not sure that the process start or not, don't hesitate to type the command again, then you will see such message.

```
> InterComLayerPHOS.sh start
--> InterComLayerPHOS pid(13290) is already running..
```

Best regards,
Hisa