PHOS shift user manual

Last update - 07.10.2011 (A.Vinogradov)

PHOS at ACR tel. 77687

PHOS experts:

TC - Iouri SIBIRIAK	tel. 165670	* <u>Iouri.Sibiriak@cern.ch</u>
Alexandre VINOGRADOV	tel. 165670	* <u>Alexander.Vinogradov@cern.ch</u>
DCS - Alexander MAMONOV	tel. 71603*	Alexander.Mamonov@cern.ch
Readout - Oeystein DJUVSLANI	D tel. 161080	* <u>Oeystein.Djuvsland@cern.ch</u>
PHOS Trigger - Lijiao LIU		Lijiao.Liu@cern.ch
Dong WANG		dongwang.ccnu@gmail.com
PHOS Cooling - Alexei KURYA	KIN tel. 7160	3* <u>Alexei.Kuryakin@cern.ch</u>
Offline, DQM, LED – Yuri KHA	RLOV tel. 76	305* <u>Yuri.Kharlov@cern.ch</u>
LED – Mikhail BOGOLYUBSKY	tel. 771	90* <u>Mikhail.Bogolyubsky@cern.ch</u>
Note: tel.number* = if at CERN	I	
ALICE experts:		
DCS – Peter CHOCHULA	tel. 164838	Peter.Chochula@cern.ch
Andre AUGUSTINUS	tel. 163534	Andre.Augustinus@cern.ch
DAQ - <u>alice-datesupport@cern.c</u>	<u>h</u>	
CTP - Anton JUSKO t	el.162090	Anton.Jusko@cern.ch
Ken OYAMA t	el. 162469	oyama@physi.uni-heidelberg.de
DQM – Yiota FOKA t	el.164387	Yiota.Foka@cern.ch

To find out who is the PHOS On Call Shifter or ALICE shifters

go to the Shift Signup System (SMS), log in

1) click on Current Shift Crew (in left panel)

2) click on OnCall Shifters

Table of Contents

1. General.	3
2. Basic Operation	7
How to solve some common problems	8
3. Global runs	14
4. Standalone runs (Pedestal/LED)	14
Start Data taking	16
5. Switching on/off Power Supplies, "cold start"	18
More details of the Switch ON procedure	19
	22
APPENDIX A: Description of the Main User Interface (MUI)	23
APPENDIX B: The DUS Padlocks	
<u>APPENDIX C:</u> The PHOS interlocks and alarms	
1. HW-Interlocks.	
2. SW-Interlocks.	
3. PHOS alarms conception and recommendations for shifters	29
3.1. "Cold" volume temperature alarm	29
3.2. "Warm" volume temperature	
3.3. Humidity in the "cold" volume	
3.4. Humidity in the "warm" volume	
3.5. Dew point temperature (not implemented)	
3.6. LED VME crate	30
3.7. Cooling water pressure for all PHOS module	
3.8. Wiener LV temperature	31
3.9 HV currents for each Iseg channel	
3.10. Wiener LV device doesn't respond (not implemented)	
3.11. Iseg HV channel doesn't respond (not implemented)	
4. Alarm screen	
5. Data valid screen	
Appendix D: Association of RCUs with DDLs and LDCs	34
<u>Appendix E:</u> PHOS Computers at Point 2	34
Appendix F: Events sizes per LDC	35
<u>Appendix G:</u> Voltages and currents	35
<u>Appendix H:</u> PHOS DCS Summary panel	36
<u>Appendix I:</u> Some information about PHOS construction	
<u>Appendix K:</u> Actual status of the PHOS Modules FEEs	
REFERENCIES	40

1. General

PHOS is controlled from the two PCs **aldaqacr48** and **aldaqacr49** in the ALICE Control Room (ACR). The DCS system is run from the **Windows** machine **alidcscom072** and the front-end cards and RCUs are controlled from the **Linux** machine **alidcscom075**. One logs on to these machines from aldaqacr48 and aldaqacr49. On **alidcscom072** each user logs on with his/her **own username** (CERN Nice username) and on **alidcscom075** the user is **phs** (**no password**).

Login to aldaqacr48 and aldaqacr49



Login: phos Password:

(all passes are at the PHOS working place in ACR on the paper copy)

Each machine has double screen windows, if only one of the two screens is on – press **ctrl-alt-F1**, wait, and then press **ctrl-alt-F7**.

Connecting to DCS

1) Open **Xterm** on **aldaqacr49**, type the command:

>rdesktop alidcscom072 -f

• login using **NICE username** and **password**.

If the authorization window is not opened automatically, go to the start panel and

click **PHOS**. (To leave full-screen mode: **ctrl-alt-enter**.)

2) The **authorization Windows** panel will appear:



• You should use the **NICE login** and **password** here as well.

The following window will be opened - the ALICE Main User Interface (**MUI**) of DCS system for PHOS project.



The details of this window are described in App. A.

Configuring the electronics, turning on/off FEE cards

First, you must check FEE servers by **did** (see page 15) and program RCUs (page 22).

To start the **phosgui**, log in as user **phs** on Linux machine **alidcscom075**.

This is set up by ssh keys from aldaqacr48 and aldaqacr49. Just do

> ssh phs@alidcscom075

No password has to be given.

At alidcscom075, go to the directory /home/phs/phos_dcs/bin and start the gui:

>cd phos_dcs/bin

>.startgui.sh

The following window should appear – **phosgui**:



Advice: Open the similar windows for all 3 PHOS modules.

Before one can do anything with it, one has to connect to the RCUs.

To define which RCUs to connect to, do **connection** --> **Connection Settings**.

Choose RCUs to be controlled, then **OK** (and **Save**, if need).

Then do **connection** --> **Connect now**.

The **phosgui** shows the status of one module at the time. To select module, use the buttons at the top Module 2, Module 3, and Module 4.

When the **phosgui** starts, all cards appear **grey**.

To find out the status, one should click "Update status".

Note: This should never be done during a run!

The color will change to White (Off), Green (On), Red (Error), or Black (no connection).

The buttons "**On**" and "**Off**" turn on/off all FEE cards on one RCU. Individual FEE cards can be turned on/off by clicking on the FEE card. The "**Go Ready**" button configures the electronics and disables, enables trigger. The "**Reset**" button resets the electronics, for example if PHOS goes to **busy** status. It should be followed by "**Go Ready**".

The configuration settings can be modified by clicking **Configure Electronics**. The window on the **following page** will appear. One can select the configuration options (ZS on or off, mode for subtraction of pedestals, number of samples etc.) The same window is used to load the APD settings.

NOTE: One should never do anything with the phosgui when a run is ongoing. Not even clicking Update Status. The reason for this is that the information to and from the **phosgui** goes on the same data bus as the real data.

If the **phosgui** hangs, one can exit by pressing **Ctrl-Alt-**\ (Ctrl-Alt-backslash).

If there are problems connecting to some RCUs, check that the FEE servers are running using **did**, see page 16.

READ OUT SETTINGS	APD Setting: 311
Read out region:(HG/LG):	
From: To: From: To: X: 0 63 0 63 0 Z: 0 55 0 55 0 X: 0 V 63 V 0 Z: 0 V 55 V 0 V X: 0 V 55 V 0 V 55	All modules, gain 50 @ -25 Created on 11/08/2009
Number of samples: TRU Samples: Pre-samples: Samples: 11 S1 Max: 115	Load <u>Apply to Module</u>
Zero Suppression: Threshold: Offset: 3 0 0 Enable Zero Suppression Sparse Readout: RCU Sparse Readout V	Use fixed pedestals Revision #: 0
Multi Event Buffers: 4 💌	Checkin <u>N</u> ew File
	<u>Save</u> <u>Configure</u> <u>Cancel</u>

The **phosgui window** for setting the configuration

2. Basic Operation

The normal state of PHOS during running (cosmics or collisions) is to have all Low Voltage (**LV**) and High Voltage (**HV**) channels ON. The FEE cards should be on and the electronics should be configured. The PHOS OnCall shifter should make sure that this is the case and correct any upcoming problems.

Note: The HV should never be ON without the LV also being ON.

If something appears to be seriously wrong or the PHOS HV has to turned off quickly for some reason, there is a simple button for moving PHOS into SAFE mode:

Moving PHOS into SAFE mode (emergency button)

- Click Right Mouse (RM) on 17 MUI button Go Safe \rightarrow go to red,
- then within 10 seconds click Left Mouse (LM) button and all PHOS will be in **SAFE mode**, which means: **HV will be switched OFF**, **Cooling**, **LV**, **LED**, **FEE will not change their status**.

How to solve some common problems

 If PHOS goes busy during a global run, has a CDH (common data header) error, or has stopped a run because of an event size > 2 MB

If DAQ/CTP calls and says that **PHOS is busy**, has produced **CDH errors**, or has an **event size** > **2 MB**, the following procedure should be followed:

- If the phosgui is not running, log on to alidcscom075 (ssh phs@alidcscom075) and start it. (See page 5).
- 2. In the **phosgui**, click **connect** \rightarrow **connect** now.
- For each module, Click "Reset" then Click "Go Ready". Note: If PHOS trigger is running, for M4 do "Configure" and "Enable Trigger" instead.
- 4. Tell SL that PHOS is ready.

If PHOS continues to be **busy**, check with DAQ that the right LDCs are selected. See below. If the problems persist, call one of PHOS expert listed on the first page of this manual.

> Association of DDLs with LDCs

To find which module a certain LDC/DDL belongs to, here is the **mapping between LDCs**, **DDLs** and **Modules** (see also Appendix D):

Module 2: LDC: M3-00-01 DDLs 1800, 1801 LDC: M3-02-03 DDLs 1802, 1803 Module 3: LDC: M4-00-01 DDLs 1804, 1805 LDC: M4-02-03 DDLs 1806, 1807 Module 4: LDC: M5-00-01 DDLs 1808, 1809

LDC: M5-02-03 DDLs 1810, 1811

If all modules should be read-out, all these should be included. If only one or two modules should be read-out, then only the corresponding DDLs / LDCs should be selected.

> If one or several HV Channels trips

Only people who are registered as PHOS expert in PVSS can do this. Others have to call the PHOS On-call shifter.

Open the **FSM Control** panel for the HV of the relevant module, module 2 in this case. To get it, open **PHS_PWS --> PHS_PWS_MODULE 2 --> PHS_PWS_HV_MODULE2**.

The panel is shown below.

The top rectangle should be **red** if there was an **error**. To ramp down the voltage, click on the to rectangle and do **reset_emerg**. This is a fast ramp down. (If one clicks **reset**, the color might change to **green**. If that happens, **click again** and select **go off**.)

When the voltage is down, the 13 V for that module should be switched off and on again.

Open the PHS_PWS_LV_MODULE_* to do that. The 13 V channel is labeled

PHS_PWS_WIE195_CH0/CH4/CH2 for Module 2,3,4, respectively.

When the 13 V has been turned on again, the APD settings should be loaded. How to do this is explained under 6) in the procedure for a Power Cycle (p. 26).

Before HV ramping up, the ramping settings may have to be modified. Go to PHOS Monitoring zone (5 in **MUI**), and click on High Voltage for the appropriate module. Click on settings. If the ramp is not set to 0.1 V/s, change it. Type "0.5" in the square Ramp and hit return. Then click set. Check that the readback value is changed to 0.1 V/s (yes, 0.1 V/s -not 0.5!). The voltages should be 395 V for Modules 2 and 3 and 350 V for Module 4. These are the default values. and should not have to be changed.

😝 FSM Com	trul :PHS_PWS_H¥_M	DDULE2: TO			×
La	System	FSM CON	State	1	
	PHS_PWS_HV_MODI	II F2	RFADY	,	- 8
Sub-Sys	stem	State]
PHS_HV_	_MOD2_CH0	0	FF 🔸	×	
PHS_HV_	_MOD2_CH1	0	N 🔸	1	
PHS_HV_	_MOD2_CH2	0	N -	\checkmark	
PHS_HV_	_MOD2_CH3	0	N 🔸	1	
PHS_HV_	_MOD2_CH4	0	N 🔻	~	
PHS HV	MOD2 CH5	0	N 🚽	~	
PHS_HV_	_MOD2_CH6	n	N 🔸	1	
PHS_HV_	_MOD2_CH7	0	N 🔸	1	
	^				
					CLOSE
Messag	ges				
	-				
2					

Then go back to the PHS_PWS_HV_MODULE_* and click on the top rectangle and select **Go Ready**. The ramping takes about 30 mins.

If channels trip repeatedly, the HV should be turned off and an expert called.

If one or more LV channels trip:

This is unusual. If it happens, an interlock should turn off the HV. If the HV is not turned off, turn it off manually. Then follow the procedure for "cold start" below.

> If an interlock is activated:

Call an expert. Try to understand what caused the interlock to be activated. If it is not understood, don't do anything. To reset the interlock, click on "Software interlocks" in the **MUI**.

 If ALICE water cooling plant, which produce cooling water for TOF, EMCAL and PHOS FEEs, has any problems HW interlock is blocking the PHOS Wieners PSs. In this case DCS experts (A.Augustinus) only can disable the interlock.
 But for PHOS security reason there is BYPASS key in CR4, which give some possibility for the Wieners using in special case, if DCS experts do not accessible.

If the reason of HW alarms was eliminated one should acknowledge it on central DCS screen. For this on Detector Safety System (DSS) screen acknowledge first

AL_PHS_LV_Interlock then O_DSS_PHS_LV_ILCK by a single click on these names on the DSS screen, column ALARMS (for AL_, top part of screen) and ACTIONS (for O_ lower part of screen).

Note that the DSS screen has to be logged in as 'dcsoper'.

If OPC server for PHOS HV is hung up (or there is other problem with HV Iseg communication) one can restart the server on alidcscom073 machine manually. For this:

- 1. Login to the **alidcscom073** as usual (through **alidcscom001** etc.);
- 2. Open the Task Manager (Ctrl+Shift+Esc);
- 3. Find the Process "ISEGHV~1.exe" and End it;
- 4. Open consol PVSS from START>PROGRAM menu>ETM PVSS 3.8;
- 5. Rerun the OPC driver 8 "OPC DA Client" process by red Stop button;
- 6. Wait for the process will rerun together with PVSS client.
- 7. Logout from alidcscom073.

Monitoring the busy box:

The busy box window is shown below

🛃 alidcsdcb1557.cern.ch - PuTTY		
RX memory pointer	FPGA1: 0x84	<u> </u>
L1 Counter	FPGA1: OxO	
L2 Accept Counter	FPGA1: OxO	
L2 Reject Counter	FPGA1: OxO	
EventID FIFO count (dec)	FPGA1: O	
Current RequestID	FPGA1: OxO	
Current EventID	FPGA1: 000	
Most recent EventID	FPGA1: 000	
Retry Counter (dec)	FPGA1: O	
FSM Halt (1=true)	FPGA1: O	
M1[0000]		
M2[0000]		
M3[1111]		
M4[1101]		
M5[1111]		
		•

Note: Real window M3[1111], M4[1101], M5[1111] means PHOS Modules 2, 3, 4.

As events are coming in, the (hexadecimal) numbers following the L1 Counter and L2 Accept Counter should increase. The busybox is reset at the beginning of every run, so it is normally not necessary to reset it manually. To reset it manually, one should log in to **alidcsdcb1557**. This is done by the command **bb** from **alidcscom075**. Then go to the directory /**mnt/dcbrw/busybox_files** and execute the following command >. / reset_phos_bb.sh (Do not use it during the Run!)

The new busybox window will be opened.

The busy box settings are defined in the file

/nfs_export/dcbrw/busy/busybox_files/bbinit_phos.sh

which is included to the **reset_phos_bb.sh** script.

Actual version of busybox FPGA file is "busybox57_fpga1_solo.bit".

To check the actual version use > rcu-sh r 0x2015 on alidesdeb1557 -

version 57 (means 0x39) for September 2011.

> Checking the FEE Servers using did (before FEE switching ON and configuring)

If the did window is not running, it can be started from alidcscom075.

>ssh phs@alidcscom075

> did

Click **View** --> **All Servers**. The window is shown below:

XDID - DIM Inf	formation Displa	ıy			_ _ X
File View Com	ile View Commands				Help
		14 Server	rs known - 8065 S Displaying ALL S	ervices Available ervers	
DIS_DNS	PHS-FEE_0_04_3	PHS-FEE_0_02_1	PHS-FEE_0_03_0		
PHS-FEE_0_02_0	PHS-FEE_0_04_2	PHS-FEE_0_02_3	PHS-FEE_0_03_1		
PHS-FEE_0_04_0	PHS_TOR	PHS-FEE_0_03_3			
PHS-FEE_0_04_1	FHS-FEE_0_02_2	PHS-FEE_0_03_2	ſ		
			5		

There should be 16 buttons in this window. One DIS_DNS. One PHS_TOR. One PVSSSys91Man1::DIMHandler (not in Fig. above). One ztt_dimfed_server (not in Fig. above). 4 buttons for each module, PHS-FEE_0_0[2/3/4]_[0/1/2/3]. The first number indicates the module. If any of the PHS-FEE_0_0[2/3/4]_[0/1/2/3] buttons are missing, it means that the corresponding FEE servers are not running. To restart them, go to the directory **/home/phs/bin** on **alidcscom075** and run the script **all_phos_dcs_m2_reboot.sh** to reboot the FEE servers for module 2. The "m2" is replaced by "m3" and "m4" for modules 3 and 4, respectively. The PVSSSys91Man1::DIMHandler and ztt_dimfed_server are only there if the intercom layer is running. If the DIS_DNS button is missing one should execute **/usr/local/dcs/dim/linux/dns** on **alidcscom075**. Note: After LV off long delay may occurred before the buttons will disappear.

3. Global runs

Before PHOS can participate in a global run, the DCS and DAQ locks should be released

from **aldaqacr48** and **aldaqacr 49**. The locks will be taken by the global DCS and DAQ shifters. Don't change the configuration or do anything with the phosgui when a global run is ongoing.

Before PHOS is handed over to global control, it should be checked that the detector is in good shape. A standalone run should be taken and there should be no errors. The **event size** for empty events should be consistent with **Appendix F**.

4. <u>Standalone runs (Pedestal/LED)</u>

Before starting, the control of the **DCS and DAQ locks** should be taken. Ask the shiftleader to release the locks if necessary. Make sure that all LV and HV channels are ON and that the **phosgui** is running. If it is not running, log on to alidcscom075 and start it:

>ssh phs@alidcscom075 >cd phos_dcs/bin >. startgui.sh

Connect to the RCU/FEE cards by clicking **Connect --> Connection Settings** and select the RCUs to be read-out. Then click **Connect --> Connect Now**. Check that all FEE cards are ON by "**Update status**". If they are not ON, check next section ("Cold start") on how to turn them ON.

Select the number of pre-samples, samples, Zero-suppression (enable/disable), Sparse readout (enable/disable) according to the type of run. This is done by clicking on **Configure Electronics** in the **phosgui**. In the Configure Electronics window:

- Select number of pre-samples and samples, Zero-suppression (enable/disable), Sparse readout (enable/disable), threshold and offset (if applicable).
 - For pedestal run, select zero-suppression OFF and sparse read-out OFF. Select 11 presamples and 51 samples. **Do not set the threshold to 0.**

- For LED run, select zero-suppression ON (threshold 3, offset 0) and sparse-readout ON. Select 11 presamples and 51 samples.
- Click Save and then Cancel.
- For each module, click "Go Ready".

The configuration is done when information **stops flowing** in the **alidcscom075** window. PHOS is now ready to take data. To take a **pedestal run**, proceed to start data taking.

For a **LED run**, the **LED system should be started** now.

This is done in the following way:

Click **FSM** panel on **MUI** – the **Top level DCS control** panel will appeared. In Top level DCS control, click the button **PHS_DCS_RUN** (the lowest one) and choose the command "**CONFIGURE**". In the window that appears, write "**LED**" in the space Value and click **Send**. This will start the LED system. In the Main GUI, the square LED flash at **11** should change **from blue to green** and the **run type** will change to **LED**.

By default, the LED configuration will be **2554** ("saw" f=200Hz). To use a different one, open the LED-panel by clicking on LED at **5** in the Main GUI. Type the configuration at the top and select which modules to activate. Then proceed as above to start the LED system.

After finishing the LED run, you should click on the **PHS_DCS_RUN** button in the top level DCS control and select the command "**CONFIGURE**". Type **PHYSICS** (or **PEDESTAL**) and click **Send**. The LED system will deactivated. The square LED flash at **11** in the Main GUI should change **from green to blue** and the **run type** will **change** to what is selected.

REMEMBER TO SWITCH OFF THE LED SYSTEM BEFORE STARTING ANY OTHER TYPE OF RUN.

Start data taking

If the DAQ window (**PHOS_DCA**) is not open, open it by clicking on the 6th icon from the left in the lower panel (it's an Emacs icon and when the mouse hovers over it, it should say **DateHI**;



if there is no lower panel, do ctrl-alt-enter and it will appear). Choose PHOS.

If the padlock is red, ask the ECS operator to release DAQ control. Then click on the padlock and lock it. It should then be **green**, as in the figure above. Unlock the DAQ_RC padlock. Click on **view --> Show DAQ Control** to open the **DATEPHOS_DAQ gui** (see below).

Note: For correct DAQ control work the Option "Ignore ACT pending actions" should be enabled.

XDATEPHOS_DAQ::PHOS	CONTROL	
<u>File View O</u> ptions <u>W</u> indows		Status updated
	PHOS DAQ - Run Control HI running on aldaqacr48 with PID RC running on aldaqecs01 with PID	628 12485
Disconnected Configuration	Parameters Start processes	start Data Taking Start
Define	fine AFFAIR	LEDM Stop
Show	ow HLT: mode A	v Abort
	LDC: Local Recor	ding OFF 🗸
	CDC: NO Recordin	ng v
RUN NUMBER : 91692 Run Co	ntrol Status : READY	

Lock the main padlock in this window (DATEPHOS_DAQ). Then, click the ">" arrow following "Disconnected Configuration". Then click the ">" Following "Connected Run Parameters". Unlock the padlock in this window.

Note: If one has to change which ddls that should be read-out, it can be done as follows (but this is something which should normally not be done by the shifter, more details are in the expert manual): click Define under "Disconnected Configuration", then choose Detector, then choose PHOS. Select the LDCs that should be read-out. In the (small) ALICE DAQ window, click select equipment and mark the desired DDLs and click Commit. Login to alidcscom075 and go to /nfs_export/dcbrw/busy/busybox_files. Check that the right RCUs are included / commented out in the file bbinit_phos.sh.

Go back to the **PHOS_DCA** window. Lock the padlock **DAQ_RC**. **Unlock the HLT** padlock. The **DCA** frame should be **green**. **Release the lock on PHS_PWS_TOP window in DCS GUI.** Click on it **to start** a **Pedestal or LED** run.

When the run has started a new window will appear (**PHOS**). The number of events is shown under the **LDC status display** (number of subevents recorded).

To stop the run, click on DCA and select stop_datataking. It is recommended to run about 100 events for Pedestals and 10,000 events for LED runs.

To start the **transfer of data to alien**, click on "**File**" in the PHOS_DCA window and select **Start migration of data to Castor**.

To release DAQ control, click on DCA and select "**Release Resources**", then unlock the main padlock in the PHOS_DCA window.

5. Switching on/off Power Supplies, "cold start"

Note: The HV should never be ON when any LV channel is OFF!

Switching **OFF power** should be done in the **following order**:

- 1. Ramp down the HV.
- 2. Turn OFF the LV (all channels, including 13 V).

Switching **ON power** should be done in the **following order** (note that this procedure normally takes 2-3 hours)

- 1. Switch ON LV and program the RCUs. For all Modules:
 - Switch ON the first two LV channels (not the 13 V).
 Wait and be sure that all RCUs and PHS_TOR servers are appeared in DID window (see page 12).
 - ii) Program all the RCUs, 84-87 for M2, 92-95 for M3 and 88-91 for M4 on alidcscom 075 in /home/phs/bin subdir.
 - iii) Switch ON the remaining three LV channels (not the 13 V).
- 2. Open the **phosgui** and connect to all modules, but no switch ON FEEs yet . Click "**reset**" and "**go ready**".
- Release the lock on the TOP level of DCS panel PHS_PWS_TOP PHOS then should be "READY" and green.
- 4. Do a test run (**PEDESTAL** or **LED**) and check that there are no **CDH errors**.
- 5. Click "reset" and turn ON the FEE cards (and all TRUs, if PHOS Trigger need).

- 6. Turn ON the **13 V** LV channel for each module.
- 7. Check if INTERCOM_LAYER running and stop it by commands on alidcscom075

under SU (Super User) – "\$D111&phs":

>cd /etc/init.d

>./jicl status

>./jicl stop

- 8. Load and apply the APD settings (**311** by default). The process should be finished by "...success" messages. Repeat it for all 3 modules. Close the windows manually Cancel.
- 9. [Start INTERCOM_LAYER by command on alidcscom075 under SU:

>cd/etc/init.d (if need)

>./jicl start] - Ignore the point until the FEE voltage and temperature readout project will be realized.

- 10.Configure electronics "GO READY" for M2, M3 and "CONFIGURE" and "Enable Trigger" for M4. The process should be finished by 4 "...Done!" messages, if not repeate "GO READY" command.
- 11.Turn ON HV.
- 12. If the TRUs did not turned ON earlier and should be read-out, they can be turned ON now.
- 13. Configure TRUs and TOR (see Trigger manual).

Note: If communication with FEEs is lost and frozen, use **>ps ax** and **>kill -9 Nprocess** commands.

More details of the Switch ON procedure

> Switch ON LV and program the RCUs.

Note that all three PHOS Modules switch on the same way.

The Low Voltage (LV) is handled by the Main User Interface (MUI).

To open the LV controls, click on **PHS_PWS --> PHS_PWS_MODULE 2 -->**

PHS_PWS_LV_MODULE2 for LV of M2, and similarly for M3 and M4.

Select the first two LV channels (not the 13 V). These are WIE193_CH0, WIE193_CH2

for M2, **WIE191_CH0**, **WIE191_CH2** for M3 and **WIE190_CH0**, **WIE190_CH2** for M 4. Use the upper button of the **gui** and select "**Go Ready**".

Note: all channels should be selected and turned on simultaneously **using the top button**; don't turn on each channel separately.

Program the RCUs by logging on to **alidcscom075** (ssh phs@alidcscom075). Go to the directory **/home/phs/bin** and run the script :

> program_rcu_171109.sh [RCU], where [RCU] should be 84, 85, 86, 87 for M2
92, 93, 94, 95 for M3 and 88, 89, 90, 91 for M4.

Go back to the LV control window and select the remaining **three** LV channels (**not the 13 V**) for **WIE193_CH(4,6,8**). These are **WIE191_CH(4,6,8**) and **WIE190_CH(4,6,8**) for modules 3 and 4, respectively. Turn the channels ON using the upper button on FSM control panel and select "**Go Ready**".

> Start the phosgui if it is not already running.

To do this, log on to alidcscom075 and go to the directory /home/phs/phos_dcs/bin and enter

>.startgui.sh

For more info on the **phosgui**, see page 5. In the **phosgui**, connect to all modules. Then click "**Go Ready**" for each module.

- Do a test run (PEDESTAL run with NO- recording) and check that there are no CDH errors. How to do this is explained in the previous section "Standalone runs" under data taking. Take a pedestal run and check that at least 30 events are collected. Check the infoBrowser for CDH errors. If there is a CDH error, check which DDL produced it and restart the corresponding Module. If the module cannot be identified, all modules should be restarted. If after 3 attempts there are still problems, contact an expert.
- The FEE cards are turned ON using the phosgui. If the phosgui is not already running, log on to alidcscom075, go to the directory /home/phs/phos_dcs/bin and enter >.startgui.sh

Turning ON the RCUs should be done **one module at the time**.

- Click **connect --> connection** settings.
- Select the **DDLs** for one module.
- Click **connect-->connect now**.
- Click **reset**.

• To turn on the cards in one RCU, click "ON" in the **phosgui** (but check below for exceptions for **RCUs 0 and 2** in **M3** and **RCUs 0 and 3** in **M4**).

Repeat the steps above for all 3 modules. If the **phosgui** crashes, it can be restarted and the FFEs/RCUs that were turned ON will remain ON. To check which **RCU/FEE** are **ON** use **Update Status** and continue to turn on the RCUs.

Note: Some of the RCUs and FEE cards in Module 3 and 4 require special attention

See Appendix K for actual FEEs status of all three PHOS Modules

For M3, RCU 0, turn ON the FEE cards in **Branch B** by hand, i.e. click on each card one at the time. The cards should turn **green**. Don't do anything with the cards in **Branch A**.

For M3, RCU2 don't turn ON FEE cards in both brunches at all.

For **M4**, **RCU0**, turn ON the FEE cards in **Branch A** by hand, i.e. click on each card one at the time. The cards should turn **green**. Don't do anything with the cards in **Branch B**.

For M4, RCU3, turn ON all FEE cards *except card 7 and card A in Branch A* by hand.

Note: If communication with FEEs is lost or frozen, use >ps ax , find the frozen phosgui

process number and then use >kill -9 Nprocess commands.

Then restart **phosgui** by **> . startgui.sh** command.

- To turn ON the 13V, go back to the LV window on alidcscom072. Enable channel WIE195_CH0 (for M2) and click "GO READY". For M3 and M4, the corresponding channels are WIE195_CH4 and WIE195_CH2, respectively.
- To load APD settings, go back to the phosgui and select one module. Then click Configure Electronics. In the new window:
- Select **APD settings** The default is 311 for all modules (gain 50 at -25 C).

- Load.
- **Apply to module** (wait).
- status = 1 = **SUCCESS** should be seen in the bottom frame of the **phosgui** (it might be needed to scroll up to see this).

• click Cancel .

Repeat the above for all 3 modules. Note that this may take up to 5 min per module.

Configure electronics (if need NO- default).

This can be done for all modules at the same time. Go to the **phosgui** and click **connection -** -> **connection settings** and select all modules. Click **connect --> connect now**. Click **configure electronics**. In the Configure Electronics window:

• Select number of **pre-samples** and **samples**, **Zero-suppression** (**enable/disable**), **Sparse readout** (**enable/disable**), **threshold and offset** (**if applicable**).

- For **pedestal run**, select zero-suppression OFF and sparse read-out OFF. Select **11** presamples and **51** samples. **Do not set the threshold to 0.**
- For **LED run**, select zero-suppression ON (threshold 3, offset 0) and sparse-readout ON. Select 11 presamples and 51 samples.
- If **TRU readout** enabled, set **TRU Samples** min=95, max=115.
- For **global** (**cosmics, collisions**) **runs**, select zero-suppression ON (threshold 3, offset 0) and sparse-readout ON. Select 11 presamples and 51 samples.
 - Click Save and then Cancel
 - For each module, click "Go Ready".

Turn ON HV. This is done from the MUI: PHS_PWS --> PHS_PWS_MODULE 2 --> PHS_PWS_HV_MODULE for M2. (The panel is shown on page 12). Enable all channels and select "GO READY" in the top button. The similar commands for M3 and M4.

The ramping takes about 30 mins.

APPENDIX A: Description of the Main User Interface (MUI)



Top left-hand corner:

- 1 User access window for users' logins.
- **FSM-button** (Finite State Machine) Top level of DCS control for controlling LV,
 HV (Power Supply PWS), LED, FEE, Matrix Cooling Machine, Run Control Unit (in order to choose the type of run). Press **FSM** button to begin the process of controlling.
- 3 (PHS_DCS) Info-window describes the state of the system.

Left side:

4 <<**PHS_DCS**>> -the hierarchical tree of subsystems.

Bottom left-hand corner:

5 PHOS Monitoring Zone – quick access to the info about the state of the systems.

Top:

- 6 Alarm –current alarms information.
- 7 Manual -PHOS DCS Manual 2007 ([1]).

Right side:

- 8 ÷ 10 Indicators of PWS system state for 2, 3, 4 PHOS modules.
- 11 Indicators of LED monitoring system state.
- 12 Indicators of FEE electronics system state (which is now in progress).
- 13 Indicators of Matrix Cooling system state & Temperatures and Humidity.
- 14 Software Interlocks Software Interlocks status.
- 15 Help general information about the status' colours.

Bottom right-hand corner:

16 - Close -in order to close the Main User Interface. To start MUI once more after closing - Start \rightarrow PHOS

Top center:

17 - PHS Go Safe – Moving all the PHOS modules to safe mode (turning off all HV channels).

Bottom:

18 -19 - SW (Software) Interlocks and their Alarms.

20 - HW (Hardware) Interlocks.

- **21 Run Type**.
- 22 FSM (see below) Stop/Start/Restart of all FSM -ONLY IN THE LAST RESORT!!!



PHOS FSMs Control Window, it appears after clicking LM on 22 - FSM

- 23 ALICE DCS monitoring zone is in progress
- 24 DCS summary panel (see App.H)
- 25 Data Valid panel give the information about interlocks and alarms.

You should wait ~ 1 min before information will arise.

- 26 PHOS modules general status.
- 27 Message sender to other detectors.
- 28 LHC Beam general status.

For more details – click on 7 (PHOS Detector Control System Manual - 2007([1])).

The status colours

Dark blue -system is not ready, switched off or is in standby state; HV/LV is off.

- Yellow system is in the intermediate state (ramping, cooling etc.).
- **Orange** no connection with the device.
- Green system is ready to work; HV/LV is on.
- Red an error or an incorrect operation of the device or system of devices.

Click 15 for Help – displays general information about status colours.

Getting info

T°, LV, HV currents over time-zone $8 \div 10$ Trends, Temp. , LV , HV or zone 5

Matrix Cooling, Water Cooling Pressure -zone 13 or zone 5

LED -zone 11 or zone 5

Devices status – zone 4 – LM button, then RM button \rightarrow View.

How to start Mui manually

Click Start – PHOS to start MUI manually:



For automatic MUI start put D:\Shortcut to PVSS_startup_file.bat into the Start/Programs/Startup folder.

Then you should be authorized once more by entering your **NICE login** and **password** into PHOS DCS access window NICE login NICE password :



APPENDIX B: The DCS Padlocks

DCS Padlocks

Padlock is unlocked – it means that the control is free, and anyone can take over.

To take control - (LM button -TAKE)

To release control - (LM button - RELEASE_ALL)

Padlock is locked – it means that the system is under control.

In yellow frame – something excluded – control over part of the system.

In **orange** frame - something excluded – control over part of the system and/or

shared control.

Green – only we have control.

Blue – we share control with someone.

Grey - nobody has control.

Orange (red) – someone takes control.

Strikethrough – if this mark appears on any of the padlocks, even after you have taken control, the subsystem corresponding to this padlock will still be uncontrolled. In order to take over this subsystem unlock the padlock.

APPENDIX C: The PHOS interlocks and alarms

Interlocks were made to save our detector in case of emergency state and/or incorrect operator reaction. In case of error the interlock switches the system into safe mode and informs the shifter.

1. HW-Interlocks

Water Cooling Plant Hardware Interlock.

Crystal Cooling Plant Hardware Interlock.

LV power crate Hardware Interlock.

DSS reaction on Hardware Interlock.

When an error occurs in any of these subsystems, all LV crates are blocking (switching off without the possibility to restart by the operator).

If any HW-Interlock is in action – the square changes colour (zones 18 \div 20).

Only ALICE DCS operators can unblock HW-Interlocks.

2. SW-Interlocks

LV-HV Interlock

If any PHOS module has HV without LV, interlock switches off the HV in emergency mode (50 V/sec) after 30 seconds delay.

FEE-Temp-PWS Interlock

If the temperature of any "warm" volume of the PHOS module is higher than 55 degrees Celsius, the interlock stops the HV of this module. If the temperature is equal to Dew Point Temperature, the interlock stops the HV of this module.

<u>Humidity – HV Interlock</u>

If the humidity in "warm" value of the PHOS module is above 50%, interlock stops all HV (0.5V/sec) for this module.

Water Pressure-PWS Interlock

If water pressure of FEE water cooling is more than 1000 mbar, the interlock stops all HV (0.5 V/sec) and then LV for all PHOS modules.

Cooling Plant-HV Interlock

If the Matrix Cooling Plant is in state of an error or does not respond for 15 minutes, the interlock stops all HV(0.5 V/sec) after 15 minutes delay.

If any SW-Interlock is in action, the appropriate square changes

its colour (zones 18 \div 20).

3. Description of the PHOS alarms conception and recommendations for shifter's actions

Alarm system works accordingly with a rule that for some representative variables (like voltage, current, power, temperature, humidity, etc.) there are 3 consecutive thresholds after which the messages are generated for shifter to attract his/her attention that an error state is incoming. Mentioned thresholds are ordered with increase of danger levels. If the value 1st of a variable exceeds the threshold the message is classified as "warning", after 2nd exceeding of the threshold -"alarm" and, at last, at reaching of the 3rd threshold "danger". An operator can see these messages with additional accompaniment of the description of needed actions. The current list of alarms is as follows:

3.1. "Cold" volume temperature alarm.

• **Warning**: $+25^{\circ}C \le t < +30^{\circ}C$; pay attention to the high temperature level inside the "cold" volume of PHOS module, check the state of the PHOS matrix cooling plant and the water cooling system.

• Alarm: $+30^{\circ}C \le t < +35^{\circ}C$; switch off the power of the alarmed PHOS module, check the state of the PHOS matrix cooling plant and the water cooling system, inform the PHOS Run Coordinator.

• **Danger**: $t \ge +35^{\circ}$ C; immediately switch off the power of the alarmed PHOS module, check the state of the PHOS matrix cooling plant and the water cooling system, inform the PHOS Run Coordinator.

3.2. "Warm" volume temperature.

• **Warning**: $+35^{\circ}C \le t < +45^{\circ}C$; pay attention to the high temperature level inside the "warm" volume of PHOS module, check the state of the FEE temperature sensors, PHOS matrix cooling plant and the water cooling system.

• Alarm: $+45^{\circ}C \le t < +50^{\circ}C$; pay attention to the high temperature level inside the "warm" volume of PHOS module, check the state of the FEE temperature sensors, PHOS matrix cooling plant and the water cooling system, inform the PHOS Run Coordinator.

• **Danger**: $t \ge +50^{\circ}$ C; switch off the power of alarmed PHOS module, check the state of check the state of the FEE temperature sensors, PHOS matrix cooling plant and the water cooling system, inform the PHOS Run Coordinator.

3.3. Humidity in the "cold" volume.

• **Warning**: $70\% \le h < 80\%$; pay attention to the high humidity level inside the "cold" volume of the PHOS module.

• Alarm: $80\% \le h < 85\%$; pay attention to the high humidity level inside the "cold" volume of the PHOS module, inform the PHOS Run Coordinator.

• **Danger**: $h \ge 85\%$; pay attention to the high humidity level inside the "cold" volume of the PHOS module, inform the PHOS Run Coordinator.

3.4. Humidity in the "warm" volume.

• **Warning**: $40\% \le h < 50\%$; pay attention to the high humidity level inside the "warm" volume of the PHOS module.

• Alarm: $50\% \le h < 60\%$; pay attention to the high humidity level inside the "warm" volume of the PHOS module, inform the PHOS Run Coordinator.

• **Danger**:h \geq 60%; switch off the HV power of the alarmed PHOS module, inform the PHOS Run Coordinator.

3.5. Dew point temperature (not implemented).

• **Warning**: the temperature inside the "warm" volume of the PHOS module is close to the dew point temperature (3 Degrees).

• Alarm: the temperature inside the "warm" volume of the PHOS module is close to the dew point temperature (2 Degrees), inform the PHOS Run Coordinator.

• **Danger**: the temperature inside the "warm" volume of the PHOS module is around or less than the dew point temperature, switch off the HV power for the alarmed PHOS module, inform the PHOS Run Coordinator.

3.6. LED VME crate.

• Warning: VME crate is off or doesn't respond, inform the PHOS Run Coordinator.

3.7. Cooling water pressure.

• **Warning**: $975 \le p < 985$ mBar; pay attention to the high level of the water cooling pressure.

• Alarm: $985 \le h < 995$ mBar; switch off the power for all PHOS modules, inform the PHOS Run Coordinator.

• **Danger**:h \geq 995 mBar; immediately switch off the power of all PHOS modules in the emergency mode, inform the PHOS Run Coordinator.

3.8. Wiener LV temperature.

• **Warning**: $45^{\circ}C \le t < 55^{\circ}C$; pay attention to the high level of the Wiener channel temperature.

• Alarm: $55^{\circ}C \le t < 65^{\circ}C$; switch off the power of the PHOS module, where the alarmed LV Wiener channel presents, inform the PHOS Run Coordinator.

• **Danger**: $t \ge 65^{\circ}$ C; immediately switch off the power in the <u>emergency mode</u> of the PHOS module, where the alarmed LV Wiener channel presents, inform the PHOS Run Coordinator.

3.9 HV currents for each Iseg channel.

• **Warning**: $10 \le I < 12$ mA; pay attention to the high level of the HV channel current of the Iseg HV power supply;

• Alarm: $12 \le I \le I \le 14$ mA; be ready to get an error state because of the HV channel overcurrent, inform the PHOS Run Coordinator;

• **Danger**: $h \ge 14$ mA; switch off the alarmed HV channel, inform the PHOS Run Coordinator.

3.10. Wiener LV device doesn't respond (not implemented).

• **Warning**: Wiener PL512 LV crate doesn't respond for 3 minutes, pay attention to the Wiener LV crate connection problem;

• Alarm: Wiener PL512 LV crate doesn't respond for 5 minutes, inform the PHOS Run Coordinator.

3.11. Iseg HV channel doesn't respond (not implemented).

• **Warning**: Iseg HV device doesn't respond for 10 minutes, keep the LV power for the alarmed PHOS module, pay attention on Iseg HV device connection problem;

• Alarm: Iseg HV device doesn't respond for 20 minutes, keep the LV power for the alarmed PHOS module, inform the PHOS Run Coordinator.

4. Alarm screen

Alarm screen reflects full information about alarms in the ALICE setup.

PHOS shifter selects the messages with prefix "**PHOS**", all others ones are used for general information. To activate this screen click on the **red triangle banner** with exclamation mark in the top left part of the ALICE Main User Interface (**MUI -button 6**), you will see:

Alar Print	alarms:	Acknowledgement Acknowledge • III Unack x xxx Individ ackno	nowledged ual/Group wledged	Mode Current Aları Historical Al	ns Select Time Range	khar	rlov		<u></u>	<u>@</u>
Alar Sys dcs dcs dcs	m Filters tems _globals _ui _alerts _ui?	Cevice Name * Cevice Type *	Logical Name * Device Descrip *	tion	Alarm Text Image: Alarm Text	k Filters: e availab	le	Alar *	m State	*
Sh	Device DP element		Logical name	Description	Alarm text	Dir.	Value	Ack	Time	-
W	dos ui:SERVICESI	DCS GASIDCS GAS has Alarms	-		FSM Remote Alarm	CAME	TRUE	-	2008/08/19 08:	5
W	dcs_ui:SERVICESI	DCS GASIDCS GAS.			FSM Summary	CAME	TRUE	1	2008/08/19 08:	5
W	dcs_globals:L3BSF	17. Temperature			NO CONTROL	CAME	0 °C	Х	2009/07/07 18:	1.
Da	dcs_globals:FieldM	ap.FieldMapAvailable	2	6	Field Map NOT AVAILABLE	WENT	TRUE		2009/12/17 12:	ō
A	dcs_globals:Magne	t/ALICEDipole.EmSDown			Dipole Emergency ShutDown	CAME	TRUE	III	2009/12/17 12:	ō.
A	dcs_globals:Magne	t/ALICESolenoid.EmSDown			Solenoid Emergency ShutDown	CAME	TRUE	111	2009/12/17 12:	0.
W	phs_col:Wiener/CA	N8/Crate1.General.Status.GetPowerOn	1		PHOS: VME create is off.	CAME	FALSE	111	2009/12/17 14:	0:
A	dcs_globals:dip/ts/	CSAM/SL-L02-AS-0703-ALARME.alarm	1	ALARME PX24	Level 3 Alarm	WENT	FALSE	111	2009/12/18 07:	3
A	dcs_globals:dip/ts/	CSAM/SL-L02-AS-0715-ALARME.alarm	1	ALARME PX24	Level 3 Alarm	WENT	FALSE	111	2009/12/18 08:	2
A	dcs_globals:csamS	JummaryAlert.alert		CSAM	Level 3 alarm(s)	WENT	FALSE	111	2009/12/18 09:	0:
A	dcs_globals:dip/ts/	CSAM/SL-L02-AS-0702-ALARME.alarm	1	ALARME PM25	Level 3 Alarm	WENT	FALSE	111	2009/12/18 09:	0:
W	dcs_globals:dip/ts/	CSAM/Alive.connected			Alive counter stopped	WENT	TRUE		2009/12/21 12:	<u>5</u> :

Click Right Mouse button on any message on this screen, then choose "alarm help",

and you will see the window with instructions on what to do for this alarm:

Device DP element		Description	Alarm text	Dir.	Value	Ack	Time	Co
phs_col:Wiener/CAN	l8/Crate1.General.	s		CAME	TRUE	111	2010/05/14 17:09:05.688	
								-
	(A) alidenter			Daha Alama	l	LIN III	Curren III in danse Tale - Ref	
		Joz (DCS_COMMON (UCS_SHAP	e (pris_snare (neip (en_05.is06659)	Cpris_Alam	neip (pris_a		E.XIII - WIIIUUWS IIIC	
	90.	************************************	dcs_share\phs_share\help\en_US.iso88	591\phs	* 7 X [Liv	e Search	<u>}</u>	
	File Edit V	lew Favorites Tools Help						
	- 🚖 🏘 🄏	\\alidcsfs002\DCS_Common\dcs	_share\phs_share\hel			5 - 1	🖶 🔹 🔂 Page 🔹 🎯 Tools 🤹	. »
	- 41	TT 1						-
	_ Alarm	Help						
		nata is aff						
		cate is off.						
	-							
	_							
		g VME crate is off or	doesn't respond, inform PHOS I	Run Coordir	nator.			
			GR087 200					
	_							
	Action							
	Read the d	escrition above						
		coormon doove.						
	Contact	details						
	Name: Jo:	akim Nystrand						
	Email: Joa	kim Nystrand@cern.ch						
	Phone: 1e	E 73601 GSIME 160273						
	1							
ms Displayed:	1							
						- town - to	A 100%	-
	Done					nternet	100%	11.

5. Data valid screen

Data valid screen gives full information about status of the PHOS interlocks and alarms with control that different PVSS projects on machines 072, 073, 074 are alive and respond to the main DCS. Each item is presented by a color square. The color of correspondent square is green for normal situation, otherwise if the system does not respond for time greater than 5 s the square becomes red. To activate this screen push the virtual button "**Data Valid**" in the lower right part of the ALICE Main User Interface (**MUI**), you will see:



Module	LDC	DDL	RCU	alidcsdcbl5NN		
2	M3-00-01	1800	0	84		
		1801	1	87		
	M3-02-03	1802	2	86		
		1803	3	85		
3	M4-00-01	1804	0, branch A excluded	95		
5		1805	1	94		
	M4-02-03	1806 excluded	2, branch A&B exclud	93		
		1807	3	92		
4	M5-00-01	1808	0, branch B excluded	88		
		1809	1	89		
	M5-02-03	1810	2	90		
		1811	3,FEE7&A in br.ex	91		
TOR				72		

Appendix D: Association of RCUs with DDLs and LDCs.

<u>Appendix E:</u> PHOS Computers at Point2.

alidcscom001	DCS gateway, with external in-out connection
aldaqacr39	DAQ control
aldaqpc067	DAQ LDC
aldaqpc065	DAQ GDC
aldaqdqml6	DAQ monitoring, to run DAQ DA
alidcscom075	DCS linux, NFS server for alidcsdcbXXXX
alidcscom026	Trigger to run LTU emulator
alidcscom072	DCS windows Server for PVSS
alidcscom073	DCS PWS
alidcscom074	DCS Cooling Plant
alidcsdcbl557	BB
alidcsdcbl573	LED VME
alidcsdcbl584- alidcsdcbl587	RCU
alidcscom252	Cooling Plant

Appendix F: Events sizes per LDC

For empty	events with	Zero Suppre	ession (thresh	old 3) should	l be	
M3-00-01	M3-02-03	M4-00-01	M4-02-03	M5-00-01	M5-02-03	
Without TR	U summary	readout				
3.0	2.4	2.0	1.1	1.2	1.2	kByte
WithTRU s	ummary read	out:				-
6.2	6.0	5.4	4.0	3.5	3.5	kByte
Deviations	up to ± 1.0 kB	yte are OK.				-
For pedesta	l runs withou	it Zero Supp	ression the e	event sizes sh	ould be	
M3-00-01	M3-02-03	M4-00-01	M4-02-03	M5-00-01	M5-02-03	
330	330	330	245	245	318	kByte

For LED runs, the event sizes will vary with the LED settings.

Appendix G: Voltages and currents

Typical LV voltages and currents (everything ON)

Module 2	Ch. 0	Ch. 2	Ch. 4	Ch. 6	Ch. 8	13.5 V
LV [V]	4.6	4.2	5.0	5.8	7.2	13.7
I [A]	22	51	64	12	45	15
Module 3	Ch.					
LV [V]	4.6	4.1	5.0	6.1	7.1	13.7
I [A]	20	44	60	11	45	19
Module 4						
LV [V]	4.7	4.2	5.0	6.1	7.0	13.6
I [A]	26	45	58	10	40	13

Typical HV voltages and currents

Module 2	V = 395 V*	$I = 8 mA^*$
Module 3	V = 395 V	I = 8 mA
Module 4	V = 350 V	I = 7.0 - 7.5 mA

*except HV channel 7, V=350V, I \simeq 11mA.

Appendix H: PHOS DCS Summary panel

To be convinced that the detector is in a safe, efficient condition, the following parameters should be checked:

- Check the list of urgent messages PHOS (panel "Alarm screen", available from MAIN DCS GUI - 6)
- Check the status of interlocks on panel "PHOS DCS summary", available from MAIN DCS GUI - Summary
- 3. Check the status of **Cooling Plant (PHOS**) DCS summary.
- 4. Check the **temperature and pressure** of **FEE water cooling** Pressure PHOS DCS summary. It should be ~ 500-800 mBar. Temperature and pressure are available from

http://alicedcs.web.cern.ch/AliceDCS/monitoring/main.aspx

Typical values are Press 0.45 bar, Level 216.7, Temp 8.6°C

- Check the status of LV (PHOS DCS summary).
- Check the status of **HV** (PHOS DCS summary.
- Check an average cold volume temperature (PHOS DCS summary), It should be -24°÷-26°C.
- Check an average warm volume temperature (PHOS DCS summary), It should be 10°÷25°C.



Checking of the temperature and pressure of the FEE water cooling (ALICE cooling water plant).



PHOS DCS summary

40

Appendix I: Some information about PHOS construction

PHOS consists of two parts: **cold volume and warm volume**, that separated from each other by some isolated structure.

The **cold volume** for each module contains 64x56 crystals with preamplifiers (CSPs), Avalanche Photo Diodes (APDs) and Light Emitting Diodes (LEDs) for monitoring. The crystals and APDs show best production parameters by temperature -25°C, that is supported by Cooling Plant, that operates cooling liquid temperature and humidity. In the **cold volume**_for each module there are 24 temperature sensors and 3 and humidity-sensors, which also show the temperature. *Average level of cold volume_temperature should be around -25°C, average level of humidity should be about ~40%*.

The warm volume_for each module contains 28x4 Front End Cards (FEEs) electronic cards (for 32 channels each) in copper boxes. In phos_gui (see below) these cards are marked as $1\div9$, $A\divE$, and connected with 4 Readout Control Units RCU0 \div RCU3 and with 8 Trigger Readout Units TRU. All electronics are cooling by water from the ALICE – contour under the negative pressure. *Water temperature data is not included in PHOS DCS GUI yet (but available from web form, see below)*. There are FEE's own temperature sensors (*import in PHIS DCS GUI is in progress*) and 8 temperature sensors and 2 humidity-sensors, which also measure the temperatures. *Average warm volume_temperature should be around* +13°C. *However, when FEEs are switched off, temperature may reach* +6°C. When the temperature is around +6°C, there is a danger of appearing water on FEE cards. Average humidity should be around 5%.

There is ALICE water cooling cycle, which pass through PHOS modules and cools electronics. The same water passes through PHOS **warm volume**, **EmCal**, **TOF and CPV.** The **warm volume** and **cold volume** are separated by isolating partition. To minimize the humidity level, nitrogen passes through the PHOS module volumes. Independently from PHOS module volumes there are;

• Low Voltage power supplies – **WIENER** crates cooling by water from the ALICE contour. *Average temperature of each crate channel should be around 20°C*.

• High Voltages HV power supplies – **ISEG crates** cooling by air fan. Average current level of each ISEG channel should be around 8mA (see Appendix F).

• **LED** monitoring system, consists of VME crate and **LED** cards are situated in pit, cooling by air fan.

• Matrix Cooling Plant. It's not the same with ALICE water cooling contour.

Appendix K: Actual status of the PHOS modules FEEs







GLOSSARIUM

MUI -ALICE Main User Interface

RM - Click Right Mouse Button

DRM - Double Click Right Mouse Button

LM - Click Left Mouse Button

DLM - Double Click Left Mouse Button

PWS - Power Supply

CDH – Common Data Header

REFERENCIES

[1] PHOS DCS Manual – 2007 <u>https://aliceinfo.cern.ch/PHOS/Documents/manuals.html</u>

[2] Instruction for PHOS On-call shifter

https://aliceinfo.cern.ch/PHOS/system/files/documents/Manuals/PHOS_OnCall_instruction_1.1 0.2011.pdf

.....

Authors/Editors: Sergey Nikolaev, Alexander Mamonov, Oeystein Djuvsland, Joakim

Nystrand, Yuri Kharlov, Mikhail Bogolyubskiy, Alexander Vinogradov.